



353000 keypad (quick programming instructions)

Please note: * = key button (bottom left button)

You must put entries in without pausing for more than 2 seconds or it will throw you out

*With keypads connected to the speaker module you may need to wait 1 min after powering up before programming.

1) Create a Master code:

You must create a master code 1st (up to 20 master codes maximum)

To create a master code press and hold the programming button (located BEHIND the keypad cover between buttons 6 & 9) for 20 secs until green light flashes.

Then enter *master code**master code* (I suggest you use 12345)

So in programming mode... *12345**12345* or whatever you want to make it.

2) Create a lock code (passepartout code) for releasing the door:

To create a lock code enter *master code**new code**new code* (**not in programming mode**). So you can have the cover on to do this. Press C to exit programming mode.

So... *12345**code**code* (up to 20 lock codes maximum)

3) Delete all codes:

Unfortunately you can only delete all codes at once by entering the master 3 times.

*12345**12345**12345*

4) To default: This will delete all mater codes and lock codes!

Disconnect the power. Press and hold the programming button (located BEHIND the keypad cover between buttons 6 & 9) and then reconnect power while holding button down. A long beep followed by red LED on for 4 secs = complete.

Full manual available in the library @ www.intercom.co.nz